



Anchorman Power 1200

Parts List

ITEM NUMBER	PART NUMBER	DESCRIPTION	NOTES
1	60615RC6	GIPSY	
2	445-002	BASEPLATE	
4	441-004	GIPSY PAWL	
5	447-005	CLUTCH CONE	
6	447-006	DRIVE PAWL CARRIER	
8	6044111	DRIVE PAWL	
9	441-012	PAWL SPRING	
10	445-013	NAMEPLATE	
12	6044518	DRIVE ROLLER	
13	447-013	KEY	
14	447-014	STUD	
16	6044516	WIPER SEAL	
17	445-017	SEALED BEARING	
18	6044519	EXTERNAL CIRCLIP	
19	6044519	INTERNAL CIRCLIP	
20	441-013	SCREW	
21	445-026	NUT	
22	445-030	WASHER	
D24	447-024	WASHER	
G24	447-024	WASHER	
26	6044726	DRIVE ROLLER	
D28	447-028	DRUM CAP	
29	447-029	DRUM	
30	6044544	CLUTCH NUT	
31	447-031	DISTANCE PIECE	
32	447-032	SCREW	
40	447-040	MOTOR ADAPTOR PLATE	
43	6044743	KEY	
44	6044744A	MOTOR 12V	
	6044744B	MOTOR 24V	
45	6044745	GEARBOX ASSEMBLY	
45a	6044745	GEAR	
45b	6044745	SEAL LINER	
47	447-047	SCREW	
48	526-094	WASHER	
60	447-060	MAINSHAFT(GIPSY/DRUM)	
70	6044570	FLEMING	
71	6044900	FLEMING STRIPPER	
72	445-072	FRICTION CONE	
73	445-073	FRICTION WASHER	
74	445-074	SCREW	
75	6044575	SOCKET SCREW KEY	
D76	6044676	SOCKET SCREW	
G76	6044776	SOCKET SCREW	
77	446-077	PLUG	
G127	448-127	GIPSY CARRIER	
G128	446-142	GIPSY CAP	
275	2756900	SHEET WINCH HANDLE	